

FGB INGRESS #2

TOOLS AND EQUIPMENT REQUIRED:

Flashlight
Duct Tape
4" Adjustable Wrench
Common Screwdriver
APAS Hatch Tool
Alcohol Pads (for APAS hatch seal)
Trash Bag

NOTE

Procedure starts with **MCC-M** command to open the FGB fwd PEV.

CRT

SPEC 66 ENVIRONMENT

1. When CABIN dP/dT < 0.01 (approx. ~15 minutes)

2. INGRESS PA

FGB Fwd
Hatch

Per **MCC-H**, open FGB Fwd Hatch

1. Select 'ÐÀÁÎ ×ÅÅ' (WORKING) torque setting on hatch tool.
2. Insert tool in hatch socket.
3. Rotate 6-7 turns in direction of 'XXX' (Open) arrow until it clicks.

NOTE

If tool prematurely slips or does not engage.
Select 'ÀÄÐÄÉÉÍ Î Å' (EMERGENCY) setting on hatch tool.
Reattempt to open Hatch.

4. Verify all latches are opened.
5. Remove tool.
6. Open Hatch.
7. Secure Hatch in open position using fixing device.
8. Inform **MCC-H** of FGB Fwd Hatch opening complete.

PA Port
Pnl
ÛÎ -ËÎ

3. PA AND ICC LIGHTING ACTIVATION

1. 1-Ë1 (switch) → On (switch up)
2. √■ Ä1, 2, 3, 4 (four LEDs off)

NOTE

Light switch 5-Ë1 is non-functional.

- PA Port 4. READY TO FIRE EXTINGUISHER IN PA
 1. Remove blue launch restraints bolts (four) from clamps (two) with common screwdriver.
 Tmpy stow clamps and bolts.
- PA 5. INGRESS ICC
 1. Per **MCC-H GO**, open FGB PA/ICC Hatch
 Rotate hatch handle in direction of OPEN (XXXX) position.
 Open Hatch until Hatch clicks and stops.
 2. Inform **MCC-H** PA/ICC Hatch is opened.
- ICC Port 6. ICC LIGHTING ACTIVATION
 Pnl 414 1. 1-E1 (switch) → On (switch up)
 U1 -E1 ✓ ■ A1, 2, 3, 4 (four LEDs off)
- Pnl 430 2. 1-E1 (switch) → On (switch up)
 U1 -E1 ✓ ■ A1, 2, 3, 4 (four LEDs off)
- NOTE

Light switch 5-E1 is non-functional on Pnls 430 and 414.
- Pnl 402 7. PA/ICC HATCH BULKHEAD RING INSTALLATION
 1. Remove protective ring by unsecuring two restraint clips from launch restraint brackets using TBD wrench and loosen two restraint straps.
- NOTE

If was not done at 2A ingress, remove four launch restraint bolts from the two launch restraint bracket with common screwdriver. Dispose blue launch restraints bolts and brackets in Trash Bag.
- PA/ICC Hatch 2. Unfold protective ring and connect protective ring brackets on hatch hinge pin. Verify bracket mechanisms locked to hinge pin.
 3. Secure bottom portion of protective ring alignment pin on socket of handle mechanism assembly. Rotate hatch handle in direction of Close (XXXX) position.
- ICC 8. ALARM CONTROL PANEL ACTIVATION
 Pnl TBD 1. POWER → On
 ✓ □ FUSE (light on)
 ✓ ■ F1 (LED off)
 ✓ TTS/LOCAL - LOCAL

2. TEST (pb) - push and hold
 - ✓ ☒ CI (blinking)
 - ✓ ☐ All other lights and LEDs on
 - ✓ ☐ Siren activated
3. TEST (pb) - release
 - ✓ ☐ FUSE (light on)
 - ✓ ☒ F1 (LED off)
 - ✓ ☒ All other lights and LEDs off
 - ✓ ☐ Siren off

- Pnl 229 9. READY TO LAUNCH -4 FIRE EXTINGUISHER IN ICC
 Remove blue launch restraints bolts (four) from clamps (two) with common screwdriver.
 Temporarily stow clamps and bolts.